Please read through the instructions before attempting install. If necessary consult a qualified gunsmith to complete the install.

- 1. MAKE SURE YOUR FIREARM IS UNLOADED AND CHAMBER IS CLEAR.
- 2. Separate the upper and lower receiver by depressing the take down and pivot pins.
- 3. Remove your existing magazine catch/lock.
- 4. The magazine catch orifice should be completely clear. None of the existing parts will be reused.
- 5. Insert the modified magazine catch into the lower receiver.
- 6. Place the spring over the catch on the opposite side of the receiver.
- 7. Thread the release button 1-2 turns onto the magazine catch.
- 8. With a pen, allen key, punch, or similar tool depress the release button and turn the magazine catch clockwise until the catch's shaft is flush with the release button.
- 9. Insert a magazine into your lower receiver.
- 10. Insert the F.N.G.R. into the crevice between the magazine and lower receiver.
- 11. Optional: Thread the set screw into the magazine catch to retain the F.N.G.R.
- 12. Reassemble firearm.

Installation is complete. Now you'll never forget your magazine when you go to the range!

Thank you for purchasing the F.N.G.R. device. We are so confident that you will be satisfied with our product that we offer 60 day no questions asked returns. If for any reason you aren't satisfied, please contact us at sales@maglatchusa.com for assistance.

Patent Pending Application No. 62/456,071