

# MAGLATCH

Compliance Without Compromise



MagLatch Scorpion

MagLatch has two modes. Free State and Ban State. MagLatch is to be used in Ban State mode when under state regulation that prohibits detachable magazines with "evil features." Evil features include but are not limited to pistol grips, collapsible stocks, or flash hiders. To switch between modes simply field strip and remove MagLatch SKS. **MagLatch installed** is Ban State mode. **MagLatch removed** is Free State mode. If using Free State mode while in a ban state you have constructed an illegal "Assault Weapon." By installing this device, the user of this product assumes all risks and liabilities. MagLatch and its affiliates are not responsible for the action or improper use of this product by the user.

MagLatch has not been approved by the CA DOJ. This device is designed to conform to the law as written in SB-880/AB 1135 which would define "fixed magazine" to mean an ammunition feeding device contained in, or permanently attached to, a firearm in such a manner that the device cannot be removed without disassembly of the firearm action.

## INSTALLATION INSTRUCTIONS

Please read through all of the instructions before attempting install.

If necessary consult a qualified gunsmith to complete the install.

Before beginning, make sure your firearm is unloaded and chamber is clear.

The device is installed onto the trigger assembly. Removal of the trigger assembly is required. To begin:

- Remove trigger assembly by turning safety lever to front or muzzle end of firearm.
- Depress the detent (Figure 1) and lift up on the trigger assembly.
- Insert MagLatch SKS onto spring assembly. (Figure 2 & 3)
- Insert unloaded magazine into rifle.
- Reinstall trigger assembly and be sure magazine is under the magazine release prior to detent retaining trigger assembly..



Figure 1



Figure 2 - Spring where MagLatch is to be installed.



Figure 3 - MagLatch installed.

### MODES OF MAGLATCH SKS:

- To switch between the modes of MagLatch begin by removing the trigger assembly.
- Remove MagLatch SKS from trigger pack assembly.
- Reinstall trigger assembly.